

5200.4265

Hardware

1-1/16" socket (not included)

Installation Instructions

1. Turn off the gas and electrical power to the water heater and allow the water in the tank to cool.
2. Turn off the water supply to the heater.
3. Release the line's pressure by either opening the hot water valve or T&P valve.
4. Locate the water heater's drain plug and remove it using a 1-1/16" socket.
5. Allow the heater to drain.
6. Wrap the threads of the new Extreme Max™ Products Anode Rod with Teflon tape and insert it in the drain plug's hole. Do not over tighten; use only 7-8 ft. lbs. of torque.
7. Turn on the water supply to the heater.
8. Turn on the hot water faucets in the RV and run the water until all the air has been forced out of the system. Turn off the faucets when the air is removed.
9. Check the newly installed anode rod to ensure a tight fit with no leaks or drips. Tighten or reinstall if needed.
10. Turn on gas and electrical power to the water heater.

Note: Magnesium Anode Rods should last approximately one year before replacement but should be inspected monthly. Consistent inspection will allow for an easier removal of the corroded anode rod and consistent replacement will help extend the life of the water heater. Rods should be replaced yearly or when the corrosion has eaten approximately 75% of the rod's mass.

Warranty

Extreme Max™ Product is not responsible for any consequential or incidental damages. Any and all freight charges to handle warranty claims are the responsibility of the consumer. Extreme Max™ Product is not responsible for any labor charges that may be incurred.