


3006.6621 - 12 lbs
3006.6623 - 15 lbs

⚠ Caution:

Risk of Property Damage. If anchor does not release easily, it is caught in rocks or deadfall. If this happens, allow boat to drift to original position. Let out additional rope to increase the angle between the anchor handle and flukes. When the anchor handle is more horizontal, you should be able to pull and release the anchor. Keep 50' – 100' of additional rope in boat for use in this situation.

Do NOT use chain/snap hooks with this anchor. Knot rope or use a shackle.

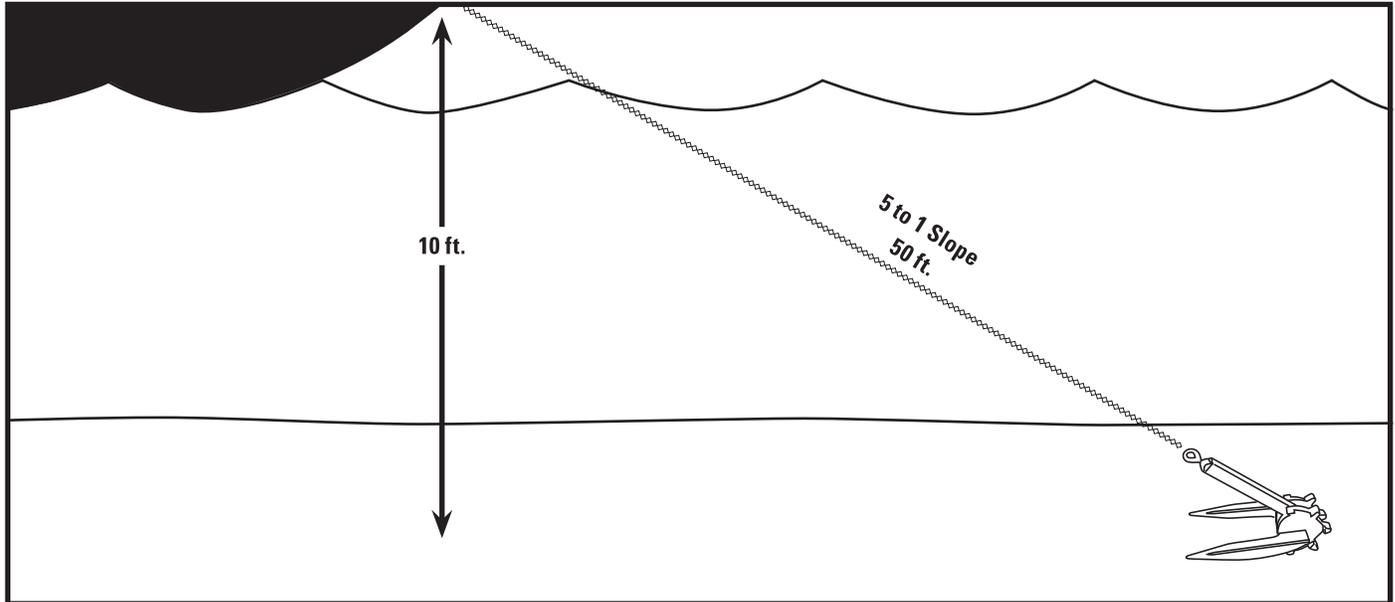

Setting Anchor

Set anchor with a slope of at least 5:1 (allow at least 5' of rope for every 1' of water depth). In rough/windy conditions, increase the slope to 6:1.

Note: Grip and Go™ anchors require more line than traditional anchors. Always multiply water depth by at least five (calm water) or six (rough water) to obtain correct rope length.

Releasing Anchor

To trigger the release mechanism, pull the anchor vertically during regular use. If the anchor is stuck, it will also release from a near-horizontal handle position.

Note: Anchor will NOT release at an angle.

Product Satisfaction Guarantee

At Extreme Max, we pride ourselves on making quality products and wish to correct any mistakes on our end. If you are not 100% satisfied with the product, for any reason, please reach out to us. We are here to help!

Warranty

This product is warranted for consumer use for 1 year after the date of retail purchase. Warranty includes parts only. Warranty valid only in the USA.

This product is warranted to the original retail purchaser to be free from defects in material and workmanship, ordinary wear and tear expected. This warranty shall not apply to any defects caused by: (I) overloading, (II) physical abuse of goods or any acts of vandalism by any person, (III) improper installation or use contrary to the instructions, (IV) commercial use. The sole remedy under this warranty is at the discretion of manufacturer: the replacement of the same or similar product, or the refund of the original purchase price. Extreme Max™ is not responsible for any consequential or incidental damages. Any and all freight charges to handle warranty claims are the responsibility of the consumer. Extreme Max™ is not responsible for any labor charges that may be incurred.


For all inquiries please send your name, mailing address, main contact phone number, original retail sales receipt, summary of alleged defect and any applicable pictures to service@extrememax.com.

3006.6621 - 12 lbs
3006.6623 - 15 lbs

Prudence:

Risque de dommages à la propriété. Si l'ancre ne libère pas facilement, il est pris dans les rochers ou des arbres morts. Si cela se produit, permettre bateau à la dérive à la position initiale. Laisser sortir corde supplémentaire pour augmenter l'angle entre la poignée d'ancrage et les douves. Lorsque la poignée d'ancrage est plus horizontale, vous devriez être en mesure de tirer et libérer l'ancre. Gardez 50' - 100' de corde supplémentaire dans le bateau pour une utilisation dans cette situation.

Ne pas utiliser la chaînette / mousquetons avec cette ancre. Nouez la corde ou utiliser une manille.

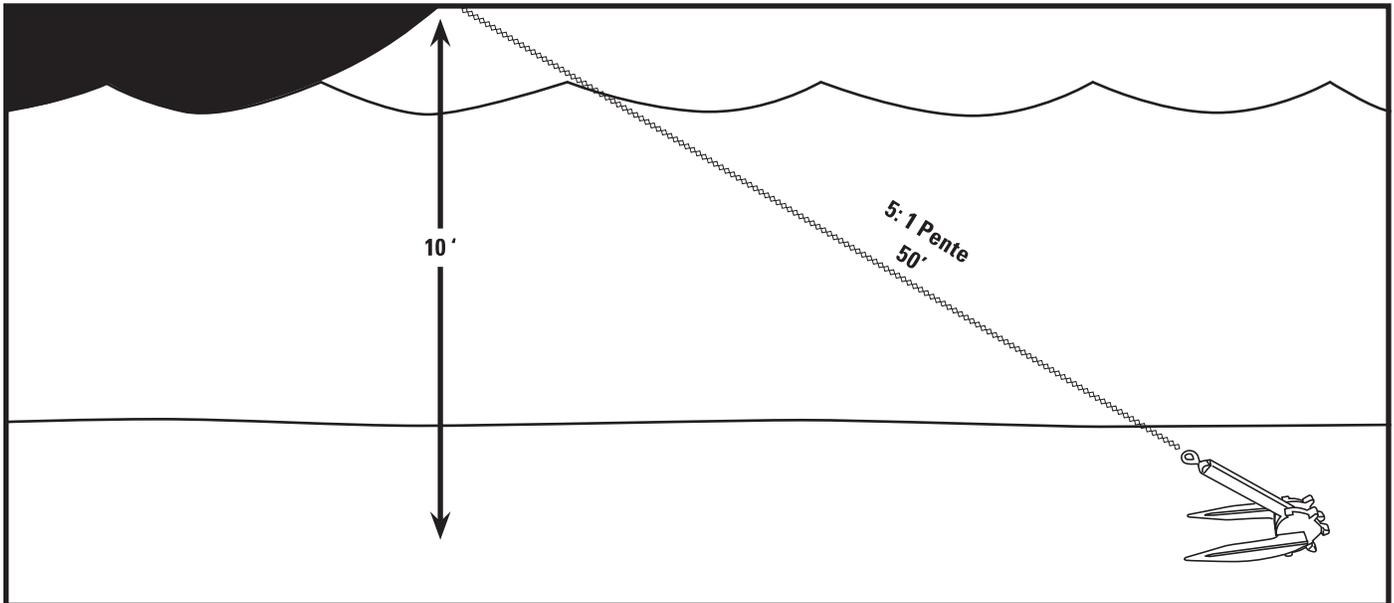

Anchor Réglage

Set ancrage avec une pente d'au moins 5: 1 (laisser au moins 5' de corde pour chaque 1' de la profondeur de l'eau). Dans des conditions difficiles / venteuses, augmenter la pente à 6: 1.

Remarque: Grip & Go™ ancres nécessitent plus de ligne que les ancres traditionnelles. Toujours multiplier profondeur d'eau d'au moins cinq (eau calme) ou six (eau brute) pour obtenir la longueur de la corde correcte.

Anchor libération

Pour déclencher le mécanisme de libération, tirer l'ancre à la verticale lors de l'utilisation régulière. Si l'ancre est collée, il sera également libérer d'une position quasi-horizontale poignée.

Remarque: Ancre ne sera pas communiqué à un angle.

Garantie De Satisfaction Du Produit

Chez Extreme Max, nous sommes fiers de fabriquer des produits de qualité et souhaitons corriger toute erreur de notre part. Si vous n'êtes pas satisfait à 100% du produit, pour quelque raison que ce soit, veuillez nous contacter. Nous sommes ici pour aider!

Garantie

Ce produit est garanti pour une utilisation par les consommateurs pendant 1 an après la date d'achat au détail. La garantie ne comprend que les pièces. Garantie valable uniquement aux États-Unis.

Ce produit est garanti à l'acheteur au détail d'origine comme étant exempt de défauts de matériaux et de fabrication, d'usure normale attendue. Cette garantie ne s'applique pas aux défauts causés par: (I) la surcharge, (II) l'abus physique de marchandises ou tout acte de vandalisme par quiconque, (III) une mauvaise installation ou utilisation contraire aux instructions, (IV) une utilisation commerciale. Le seul recours en vertu de cette garantie est à la discrétion du fabricant: le remplacement du même produit ou d'un produit similaire, ou le remboursement du prix d'achat d'origine. Extreme Max™ n'est pas responsable des dommages indirects ou accessoires. Tous les frais de transport pour traiter les demandes de garantie sont à la charge du consommateur. Extreme Max™ n'est pas responsable des frais de main-d'œuvre qui pourraient être encourus.

Pour toutes demandes, veuillez envoyer votre nom, votre adresse postale, votre numéro de téléphone principal, le reçu de vente au détail original, le résumé du défaut allégué et toutes les photos applicables à service@extrememax.com