

3006.6814 - Small
3006.6817 - Large

Read, Follow, and Save These Instructions.

Caution:

- Do not use the Beach Spike Anchor unattended.
- Not to be used for overnight or long term anchoring.
- Check the area for obstacles or obstructions before setting the anchor.
- Do not use in high-current areas.
- Be aware of tides and rip currents.
- Be aware of pinch points during anchor setting and retrieval.

Warranty

This product is warranted for consumer use for 1 year after the date of retail purchase. Warranty includes parts only. Warranty valid only in the USA.


This product is warranted to the original retail purchaser to be free from defects in material and workmanship, ordinary wear and tear expected. This warranty shall not apply to any defects caused by: (I) overloading, (II) physical abuse of goods or any acts of vandalism by any person, (III) improper installation or use contrary to the instructions, (IV) commercial use. The sole remedy under this warranty is at the discretion of manufacturer: the replacement of the same or similar product, or the refund of the original purchase price. Extreme Max™ is not responsible for any consequential or incidental damages. Any and all freight charges to handle warranty claims are the responsibility of the consumer. Extreme Max™ is not responsible for any labor charges that may be incurred.

To submit a warranty claim please send your name, mailing address, original retail sales receipt, and summary of alleged defect to service@extrememax.com.

Operating Instructions

Set the Anchor:

1. Locate a position on shore or in shallow water within the reach of the boat's anchor line.
2. Release the bungee from the buoy loop and anchor line loop.
3. Set the point of the anchor into the ground at a slight angle away from the boat.
4. Slide the handle of the anchor upward, then slide it down quickly to drive the spike-end further into the ground. Repeat this process until the anchor provides a firm hold.
5. Reattach the bungee to the buoy loop and anchor line loop.
6. Attach the anchor line to the lower hook just beneath the sliding handle.
7. If the anchor is set in the water, attach an anchor buoy to the buoy loop at the top of the handle.

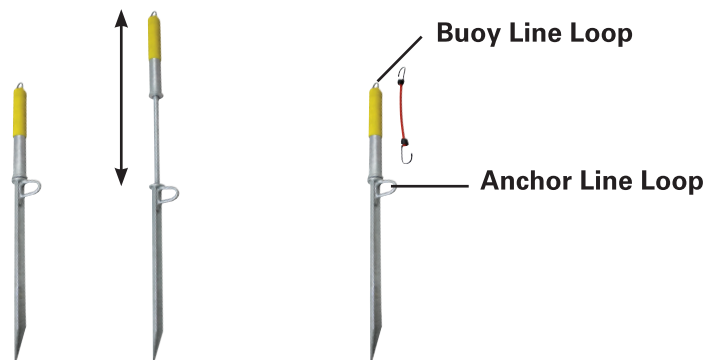

Retrieve the Anchor:

1. Release the buoy line and anchor line from the anchor.
2. Release the bungee from the buoy loop and anchor line loop.
3. Lift the sliding handle upward and tap it against the slide's stop. Repeat until the anchor is free.

3006.6814 - Petit
3006.6817 - Grand

Lisez, suivez et enregistrez ces instructions.

Mise en garde:

- N'utilisez pas l'ancre Beach Spike sans surveillance.
- Ne pas utiliser pour l'ancrage de nuit ou à long terme.
- Vérifiez la zone pour des obstacles ou des obstructions avant de fixer l'ancrage.
- Ne pas utiliser dans des zones à fort courant.
- Soyez conscient des marées et des courants de rip.
- Soyez conscient des points de pincement lors de la mise en place et de la récupération de l'ancre.

Garantie

Ce produit est garanti pour une utilisation par les consommateurs pendant 1 an après la date d'achat au détail. La garantie ne comprend que les pièces. Garantie valable uniquement aux États-Unis.


Ce produit est garanti à l'acheteur au détail d'origine comme étant exempt de défauts de matériaux et de fabrication, d'usure normale attendue. Cette garantie ne s'applique pas aux défauts causés par: (I) la surcharge, (II) l'abus physique des marchandises ou tout acte de vandalisme par quiconque, (III) une mauvaise installation ou utilisation contraire aux instructions, (IV) une utilisation commerciale. Le seul recours en vertu de cette garantie est à la discrétion du fabricant: le remplacement du même produit ou d'un produit similaire, ou le remboursement du prix d'achat d'origine. Extreme Max TM n'est pas responsable des dommages indirects ou accessoires. Tous les frais de transport pour traiter les demandes de garantie sont à la charge du consommateur. Extreme Max TM n'est pas responsable des frais de main-d'œuvre qui pourraient être encourus.

Pour soumettre une réclamation au titre de la garantie, veuillez envoyer votre nom, votre adresse postale, le reçu de vente original et le résumé du défaut allégué à service@extrememax.com.

Mode d'emploi

Réglez l'ancre:

1. Localisez une position sur le rivage ou en eau peu profonde à portée de la ligne d'ancrage du bateau.
2. Libérez l'élastique de la boucle de la bouée et de la boucle de la ligne d'ancrage.
3. Placer la pointe de l'ancre dans le sol à un léger angle du bateau.
4. Faites glisser la poignée de l'ancre vers le haut, faites-la glisser rapidement vers le bas pour enfoncer l'extrémité de la pointe dans le sol. Répétez ce processus jusqu'à ce que l'ancre assure une prise ferme.
5. Rattachez le sandow à la boucle de bouée et à la boucle de ligne d'ancrage.
6. Fixez la ligne d'ancrage au crochet inférieur juste sous la poignée coulissante.
7. Si l'ancre est placée dans l'eau, attachez une bouée d'ancrage à la boucle de bouée en haut de la poignée.

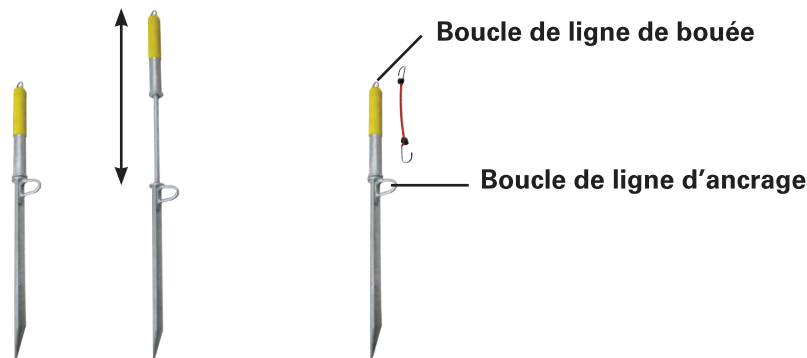

Récupérez l'ancre:

1. Libérez la ligne de bouée et la ligne d'ancrage de l'ancre.
2. Libérez l'élastique de la boucle de la bouée et de la boucle de la ligne d'ancrage.
3. Soulevez la poignée coulissante vers le haut et appuyez-la contre la butée de la glissière. Répétez jusqu'à ce que l'ancre soit libre.